

This document contains information on using the eBookingonline.net windows application for controlling lighting and or heating. This application is supported on Windows 7, 8 and Windows 10 and is installed on a PC on your local site.


Warning

Please consult a qualified Electrician for your region and building type. This document does not detail electrical specifications as these will be specific to your building and local electrical compliance laws and standards. This document details the communication of the system and not the electrical switching of the system. eBookingonline.net cannot be held responsible for any electrical faults resulting in any loss.

About

Controlling lighting or any other electrical system is performed using electrical relays (switches) that are controlled by a central or distributed controller. A small windows based application, supplied by eBookingOnline.net, interfaces the eBookingOnline.net database containing your online bookings with these controllers sending the appropriate messages to either switch on or switch off the relays / switches.

The following diagram illustrates this basic concept.

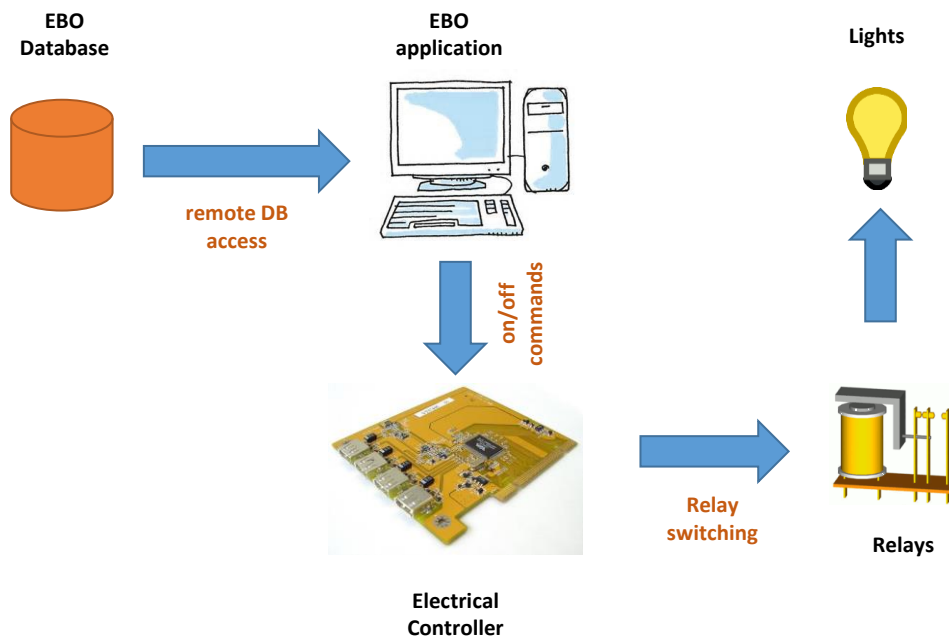

Prerequisites

In order to communicate with the EBO database remote access will need to be enabled. This allows communication from your club computer hosting the EBO application directly with the database. For security reasons the database is protected by a firewall, to allow communication a static IP address needs to be added to the firewall in order for this system to work. Remote database access is enabled through the main page of the Admin Panel and is detailed in the Administration Guide.

You will also need a Windows based computer to run the application. This computer must use the external IP Address supplied as part of the Remote Database Access request. It is recommended that this be the same computer used by members at your club, for example a Kiosk based system. The PC should not be configured to shut down or enter any sleep mode as the application runs in real-time it needs to be running constantly. Power plans that shutdown monitors or hard disks are fine. Currently the following versions of Windows are supported:

- Windows 7
- Windows 8.1
- Windows 10

How does it Work?

Using your unique remote database username and password booking details for the next 24 hours are downloaded from the online system to the local application, the process is then repeated every 3 minutes. This allows the application to have an up to date image of the online bookings and in the event of local Internet failure a snapshot of bookings for the next 24 hours, this enables the local switching of lighting and is known as 'offline' mode. Any bookings made whilst the application is working in 'offline' mode will not be available to the application and as such court lighting will not be switched. Once Internet connectivity is restored the application will resume as normal.

The application maps individual courts with addresses in the controllers and checks for bookings every minute. If the court is booked then the application sends an 'ON' message for that court, if not then it sends an 'OFF' message. The controllers are then responsible for switching the associated relay, which in turn switches the electrical circuit for the lights.

The status of the court lights and all upcoming bookings can be viewed using the application but they cannot be switched on or off manually. It is recommended that your electrician installs a bypass system so that lights can be manually turned on and off, e.g. for maintenance.

What Controllers can be used?

There are two types of controllers that eBookingOnline.net support. The preferred model for new installations is the USR-IO808-EWR controller

1. **USR-IO808 EWR Ethernet Controllers** – this is the current USRIOT 8 channel device and is the preferred solution for controlling lighting. The USR IO808 has many controls and inputs, including 8 relays which the EBO application can control the lighting for up to 8 courts . Essentially it is an IP enabled device connecting to your local network either through WIFI or wired Ethernet. In this configuration the application sends ON/OFF messages directly to the controllers over the Wifi or Ethernet. Typically in this configuration the controllers would be located near to the distribution panel for the electrical wiring system. Please note that the 8 channel device has a total limit of 10 amps @ 240vac, it is advised when using this model for multiple lighting circuits to use external relays that are rated at the appropriate level. In this way the USR controller is switching an external relay, which in turn switches the lighting circuit.
2. **USR-WIFI-IO-83 Ethernet Controllers** – These are older USR devices are IP enabled devices and can be controlled either via Wifi or wired Ethernet depending on model. Typically these devices combine the controller and relay into one unit. As such there is no additional hardware required for the computer hosting the EBO application. In this configuration the application sends ON/OFF messages directly to the controllers over the Wifi or Ethernet. Typically in this configuration the controllers would be located near to the distribution panel for the electrical wiring system. Please note that the 8 channel device has a total limit of 10 amps @ 240vac, it is advised when using this model for multiple lighting circuits to use external relays that are rated at the appropriate level. In this way the USR controller is switching an external relay, which in turn switches the lighting circuit.

Configuration of the Courts

Before installing any software configure each court with the correct lighting address in the Admin Panel. It is this address that makes the association with each court to the controller. The address you enter depends on the system chosen, this is either the X10 address of the relay or for the USR devices the IP address and channel number in the format ip_address:channel. Note that for the single channel controller use channel one. For example 192.168.0.81:1 would be channel 1 of the controller 192.168.0.81, channel 7 for the same controller would be 192.168.0.81:7. For USR-WIFI-IO-83 devices also enter the administration password; this is not used by later USR devices. To enable lights for each court check the ***enable lighting controls*** check box.

Main Edit Club details & Manage Admins	Court Name <input type="text" value="Court 1 - Glassback"/> Sport <input type="text" value="Squash"/>
Sports Manage available sports	Peak Court Cost (£) <input type="text" value="3.00"/> Off Peak Court Cost (£) <input type="text" value="2.00"/>
Courts Manage the courts available to each sport	Peak Guest Fee (£) <input type="text" value="0.50"/> Off Peak Guest Fee (£) <input type="text" value="0.50"/>
Specials Manage the special event types	Peak Coaching Fee (£) <input type="text" value="0.20"/> Off Peak Coaching Fee (£) <input type="text" value="0.15"/>
Events Manage Group Events	Using Lighting Controls <input checked="" type="checkbox"/>
Manage Database Create membership types, fields & Import / Export features	<div style="border: 2px solid red; padding: 5px;"> Lighting Controls Lighting cost (£) <input type="text" value="5.00"/> X10 Lighting Code <input type="text" value="A1"/> WiFi Lighting IP Address <input type="text" value="192.168.0.81"/> WiFi Lighting Password <input type="text" value="admin"/> WiFi Lighting Channel <input type="text" value="1"/> Light Offset (min) <input type="text" value="3"/> Sunset Offset <input type="text" value="600"/> Night Use Only <input type="checkbox"/> </div>
Members Manage Member account details & payments	
Sponsorship Create or Edit your sponsor's details	

The lighting cost is optional, if supplied this will be used in addition to any other court costs to calculate the total cost of the booking.

There are a few configurable parameters that can be used when to enable the lights, varying the time against the booking time.

Light Offset This is the time in minutes that the lights will be switched on *before* the time of the booking. This may be useful for outdoor lighting when the lights need to warm up first, or for staggering lighting start up times to reduce power surges.

Night Only Check this box if lights are only to be used after sunset, typically this is required for outdoor lighting. This requires the longitude and latitude of your location to be configured in the global system configuration. Having these co-ordinates, the system is able to calculate the local sunset time and will offer the option for members at booking time to select whether or not to use the lights. Bookings that have an end time later than local sunset will be given this option. For special events the lights will be selected by default.

Sunset Offset This option is used in conjunction with night only. The default behaviour for night only is to allow the use of lights after sunset. This offset allows the selection of lights to be adjusted in minutes before sunset. The following is an example to explain this further.

Local Sunset time 19:23

Light Offset is 8 minutes

Sunset Offset is 30 mins

Each court is configured for 30 min slots on the hour and half hour

Court Booking Time	Time Lights will be allowed	Lights Offered	Lights switched on at
18:00 – 18:30	19:23 – 30 mins = 18:53	✗	
18:30 – 19:00	19:23 – 30 mins = 18:53	✓	18:30 – 8 = 18:22
19:00 – 19:30	19:23 – 30 mins = 18:53	✓	19:00 – 8 = 18:52

USR-IO808-EWR Relay installation

The USR-IO808 EWR wifi controller requires a static IP address, this can either be manually configured or allocated statically by a DHCP server. The address given to the controller needs to be unique and not be part of the local DHCP scope. For the purposes of this example the address of 192.168.0.78 will be used with a subnet mask of 255.255.255.0. You will need to determine the best IP Address to use by referencing your existing network configurations, typically the broadband router.

The USR devices are initially configured through a Web GUI. When first powered on the controller will act as a Wifi Access Point with a SSID of USR-WIFI0-83. The first task is to connect a PC or tablet to this wireless network and reconfigure the USR device with the correct IP address and mode of STA.

1. Power on the USR device and connect a wireless device to the wifi network SSID **IO808-EWR**, the default password is **www.usr.cn**
2. Once connected point the device's browser to <http://192.168.10.1>. The default username and password are both **admin** (lowercase).
3. The opening page for Working Mode Selection should be displayed. Select **STA Mode** and click on Apply but do not restart the system

- ➔ [Mode Selection](#)
- ➔ [AP Interface Setting](#)
- ➔ [STA Interface Setting](#)
- ➔ [Application Setting](#)
- ➔ [Ethernet Setting](#)
- ➔ [Device Management](#)

Working Mode Configuration

You may configure the Uart-WIFI module wifi mode.

☐ AP Mode:
Access Point

☒ STA Mode:
Station Mode

4. From the left hand menu select STA Interface Settings. Set the AP's SSID to your local WIFI network along with the security type and pass phrase. In the WAN connection drop dropdown select STATIC (fixed IP) and complete the form with the IP address assigned for your USB controller Click on Apply but do not restart the system

- ➔ [Mode Selection](#)
- ➔ [AP Interface Setting](#)
- ➔ [STA Interface Setting](#)
- ➔ [Application Setting](#)
- ➔ [Ethernet Setting](#)
- ➔ [Device Management](#)

STA Interface Setting

You could configure STA interface parameters.

STA Interface Parameters	
AP's SSID	<input type="text" value="home"/>
Security Mode	WPA2PSK ▾
Encryption Type	AES ▾
Pass Phrase	<input type="text" value="1234567890"/>

WAN Connection Type: STATIC(fixed IP) ▾

Static Mode	
IP Address	<input type="text" value="192.168.0.78"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Default Gateway	<input type="text" value="192.168.0.1"/>
DNS	<input type="text" value=""/>

5. From the left hand menu select Device Management. It is strongly recommended to change the Admin default password. Once complete Click on the restart button to affect changes.

WIFI Module Management

1.0.9

You may configure administrator account and password, load default setting or update firmware.

Administrator Settings

Account: admin

Password: password

Apply Cancel

Restart Module

Restart Module: Restart

Restore Default

Restore Default Button: Restore Default

Update Firmware


Location: Browse...

Apply


You can use the USR installation package to control and test the USR controller. This is available from www.usriot.com , the version at the time of this document is V1.1.00

General Details	Specifications	Downloads	How to Buy
User Manual			
[User Manual] USR-IO808-EWR User Manual_V1.0.4.01 download			
[Datasheet] USR-IO808-EWR Datasheet_V1.0.0 download			
Application Software			
[USR-IOT] USR-IO-V1.1.00.rar IO-Setup-Software download			


Once unzipped and installed on a PC running on the same network, the following screen will be displayed. Click on the **By TCP** icon highlight below, and then click on **Search Dev**:

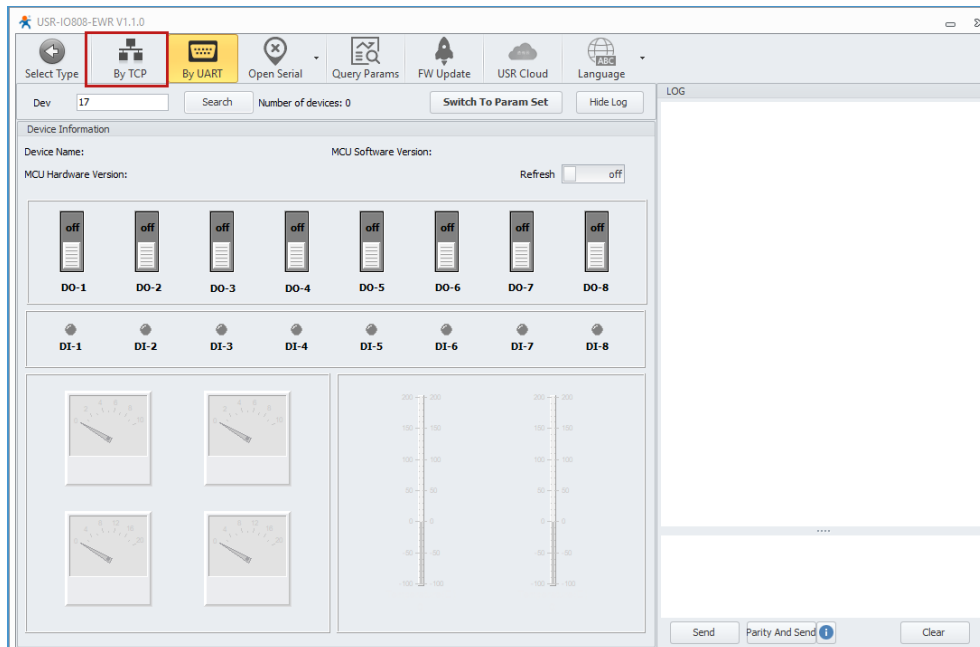

If successful communication is established between the PC and the Controller then there should be a green message with the IP address of the USR controller in the Log pane.

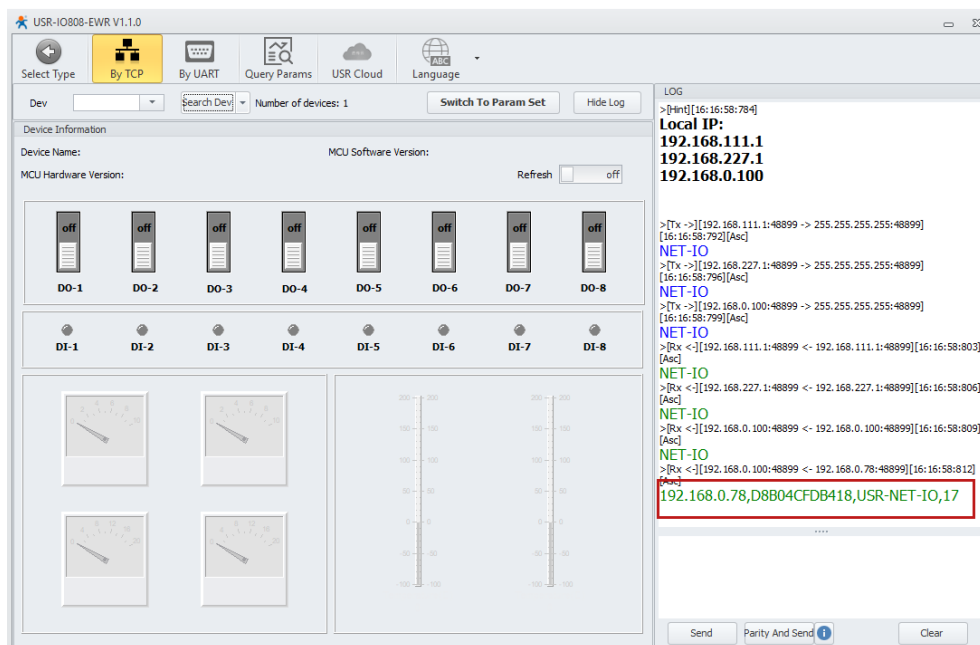


Next click on the **Dev** drop down and select the USR controller. You can now turn on or off any of the replays using the graphical interface.

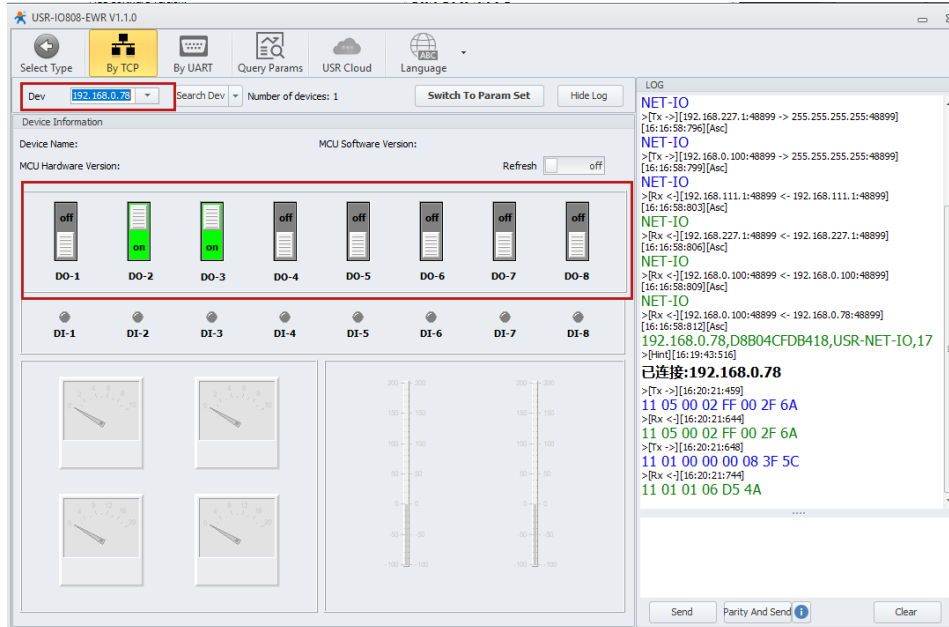

Once the USB system has been verified by testing it using the Controller's software the EBO package can be installed. Please quit the USB controller software and leave the USB controller connected for the installation of the EBO application. Ensure that the courts have been configured with the correct IP address information for your controllers, failure to do so may cause errors and the application to run slowly trying to find devices that are not connected. Unzip the contents of the package supplied by EBO and double-click on the **setup.exe** icon. Note that for the USB-IO808-EWR system you must use software version 3.00.00 or above.

When prompted 'Are you sure you want to install this application?' click on **Install** to continue. Note that if the USB is not connected or cannot be found a message box will appear indicating this, if so click on yes to confirm, the application can still be installed but will not work until the USB Controller is visible.

The EBO application will now be running in the background. Open the system tray in the bottom right-hand corner and a small EB icon will be present, right-click this selecting **options**, the following dialogue box will appear.

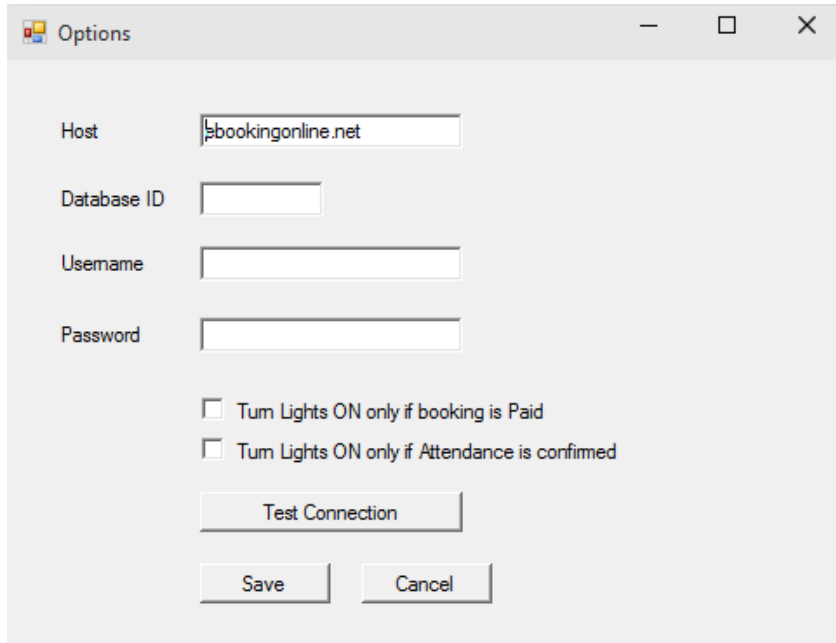


- In the host field fill in ebookingonline.net
- For the Database ID enter your club ID
- For the Username and Password enter your remote Database access credentials.

Once complete click on the test connection button; this will test these credentials and your connection to the EBO database. Once successful click save to continue. The application will be minimized back to the system tray.

Open the application once more from the system tray, selecting the **open** option. The application has two windows, the top window showing the configured courts from the database along with their X10 code and a second window showing any upcoming bookings for the next 24 hours. The use of the refresh buttons can be used at any time to refresh these windows. Please note that each lighting circuit takes approximately 5 seconds to poll, so a USR with 8 channels can take up to 40 seconds to respond. If the status of the application is 'Offline' then access to the Database cannot be established, in such a case select tools and options from the menu to check and test connection parameters.

The application is now set up and the USR relays will be switched in and out based on whether a court has been booked.

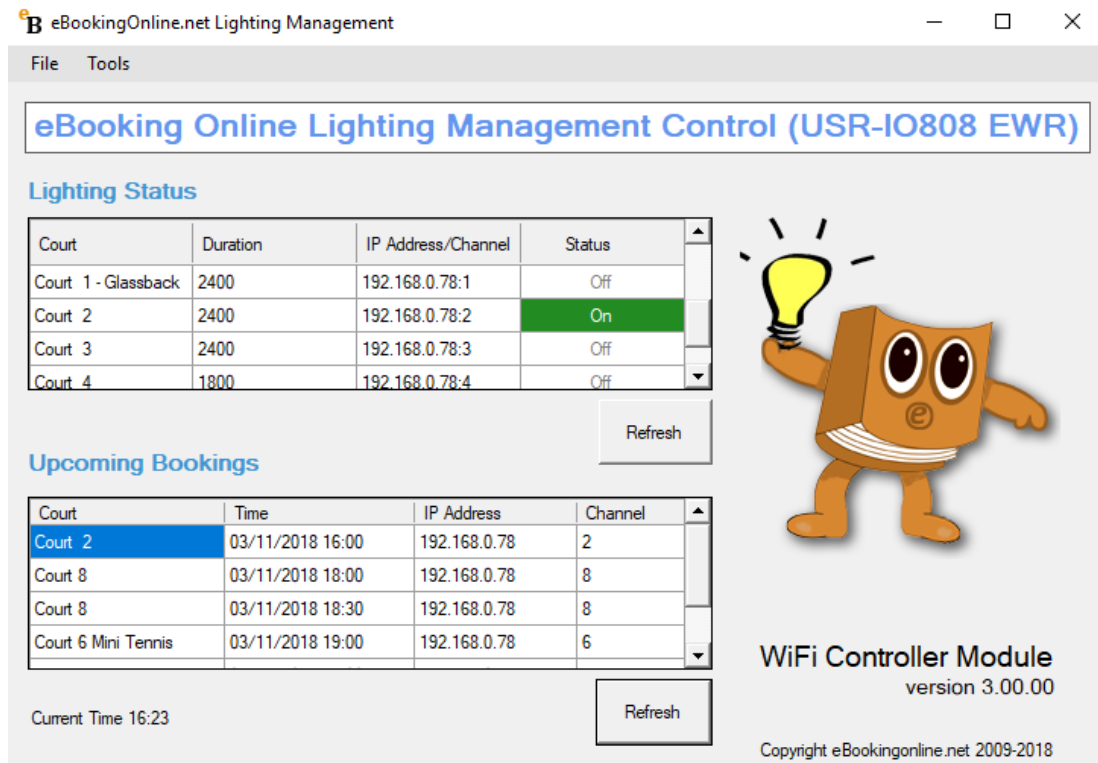

eBooking Online Lighting Management Control (USR-IO808 EWR)

Lighting Status

Court	Duration	IP Address/Channel	Status
Court 1 - Glassback	2400	192.168.0.78:1	Off
Court 2	2400	192.168.0.78:2	On
Court 3	2400	192.168.0.78:3	Off
Court 4	1800	192.168.0.78:4	Off

Refresh

Upcoming Bookings

Court	Time	IP Address	Channel
Court 2	03/11/2018 16:00	192.168.0.78	2
Court 8	03/11/2018 18:00	192.168.0.78	8
Court 8	03/11/2018 18:30	192.168.0.78	8
Court 6 Mini Tennis	03/11/2018 19:00	192.168.0.78	6

Current Time 16:23

Refresh

WiFi Controller Module
version 3.00.00


Copyright eBookingonline.net 2009-2018

USR-WiFi-IO-83 Relay


The USR Wifi controller requires a static IP address, this can either be manually configured or allocated statically by a DHCP server. The address given to the controller needs to be unique and not be part of the local DHCP scope. For the purposes of this example the address of 192.168.0.81 will be used with a subnet mask of 255.255.255.0. You will need to determine the best IP Address to use by referencing your existing network configurations, typically the broadband router.

The USR devices are configured through a Web GUI. When first powered on they act as a Wifi Access Port with a SSID of USR-WIFIIO-83. The first task is to connect to this wireless network and reconfigure the USR device with the correct IP address and mode of STA.

6. Power on the USR device and connect a wireless device to the wifi network USR-WIFIIO-83.
7. Once connected point the device's browser to <http://10.10.100.254>. The default username and password are both **admin** (lowercase).
8. Click on settings.

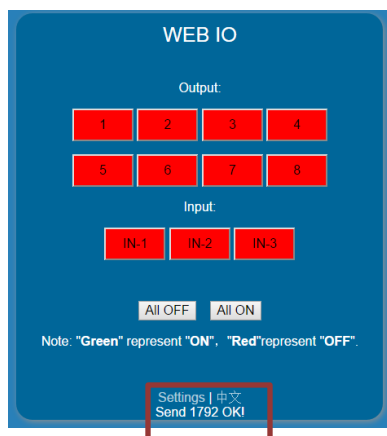

9. From the left hand menu select work mode and set the Mode to **STA mode**. IF the RJ45 port is to be used ensured that this is selected in **LAN mode**. Click **Save** but do not restart the system.
10. From the left hand menu select STA Setting and click the SCAN button to find your local Wifi network that the USR device is to connect to. Select the Wifi network and enter any password required to connect with the appropriate Encryption settings for you wireless network. Set **Obtain an IP address automatically** to **disable** and enter your manual IP Address, Subnet mask and default gateway IP addresses. Click **Save** but do not restart the system. The configuration should look similar to the following:

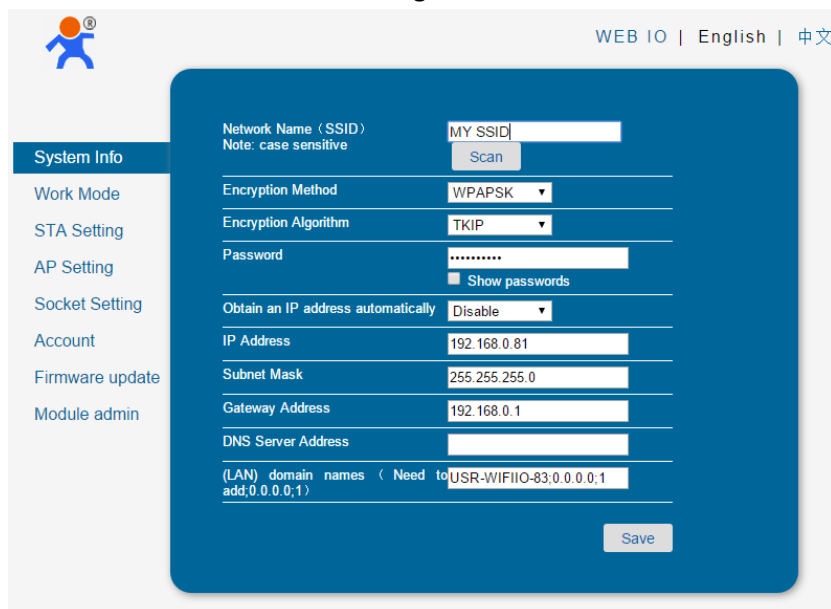


11. From the left hand menu select Account. Here it is strongly advisable to change the admin password. Failure to do this will leave the device open for anyone to switch the lights on/off. Click **Save** and then click **Restart** to restart the system with the new settings.
12. Verify that the link light of the USR device lights, this confirms that the Wifi settings are correct and that the device is connected to the Wifi network.
13. Using a browser connect to the USR IP Address. This interface can be used as a test interface to switch on / off channels of the USR device.

Please DO NOT use the mobile app for switching the USR device in conjunction with the EBO application. This can cause the system to fail.

Once the USR system has been verified by testing it using the Controller's Web Page the EBO package can be installed; leave the USR controller connected for the installation of the EBO application. Ensure that the courts have been configured with the correct IP address information for your controllers, failure to do so may cause errors and the application to run slowly trying to find devices that are not connected. Unzip the contents of the package supplied by EBO and double-click on the **setup.exe** icon.

When prompted 'Are you sure you want to install this application?' click on **Install** to continue. Note that if the USR is not connected or cannot be found a message box will appear indicating this, if so click on yes to confirm, the application can still be installed but will not work until the USR Controller is visible.

The EBO application will now be running in the background. Open the system tray in the bottom left-hand corner and a small EB icon will be present, right-click this selecting **options**, the following dialogue box will appear.

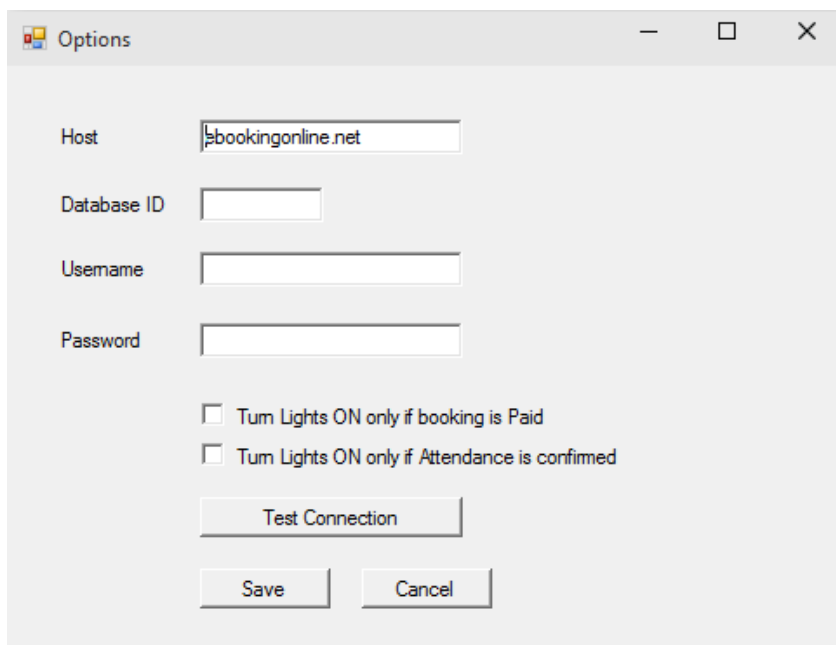

- In the host field fill in ebookingonline.net
- For the Database ID enter your club ID
- For the Username and Password enter your remote Database access credentials.

Once complete click on the test connection button; this will test these credentials and your connection to the EBO database. Once successful click save to continue. The application will be minimized back to the system tray.

Open the application once more from the system tray, selecting the **open** option. The application has two windows, the top window showing the configured courts from the database along with their X10 code and a second window showing any upcoming bookings for the next 24 hours. The use of the refresh buttons can be used at any time to refresh these windows. Please note that each lighting circuit takes approximately 5 seconds to poll, so a USR with 8 channels can take up to 40 seconds to respond. If the status of the application is 'Offline' then access to the Database cannot be established, in such a case select tools and options from the menu to check and test connection parameters.

The application is now set up and the USR relays will be switched in and out based on whether a court has been booked.

